

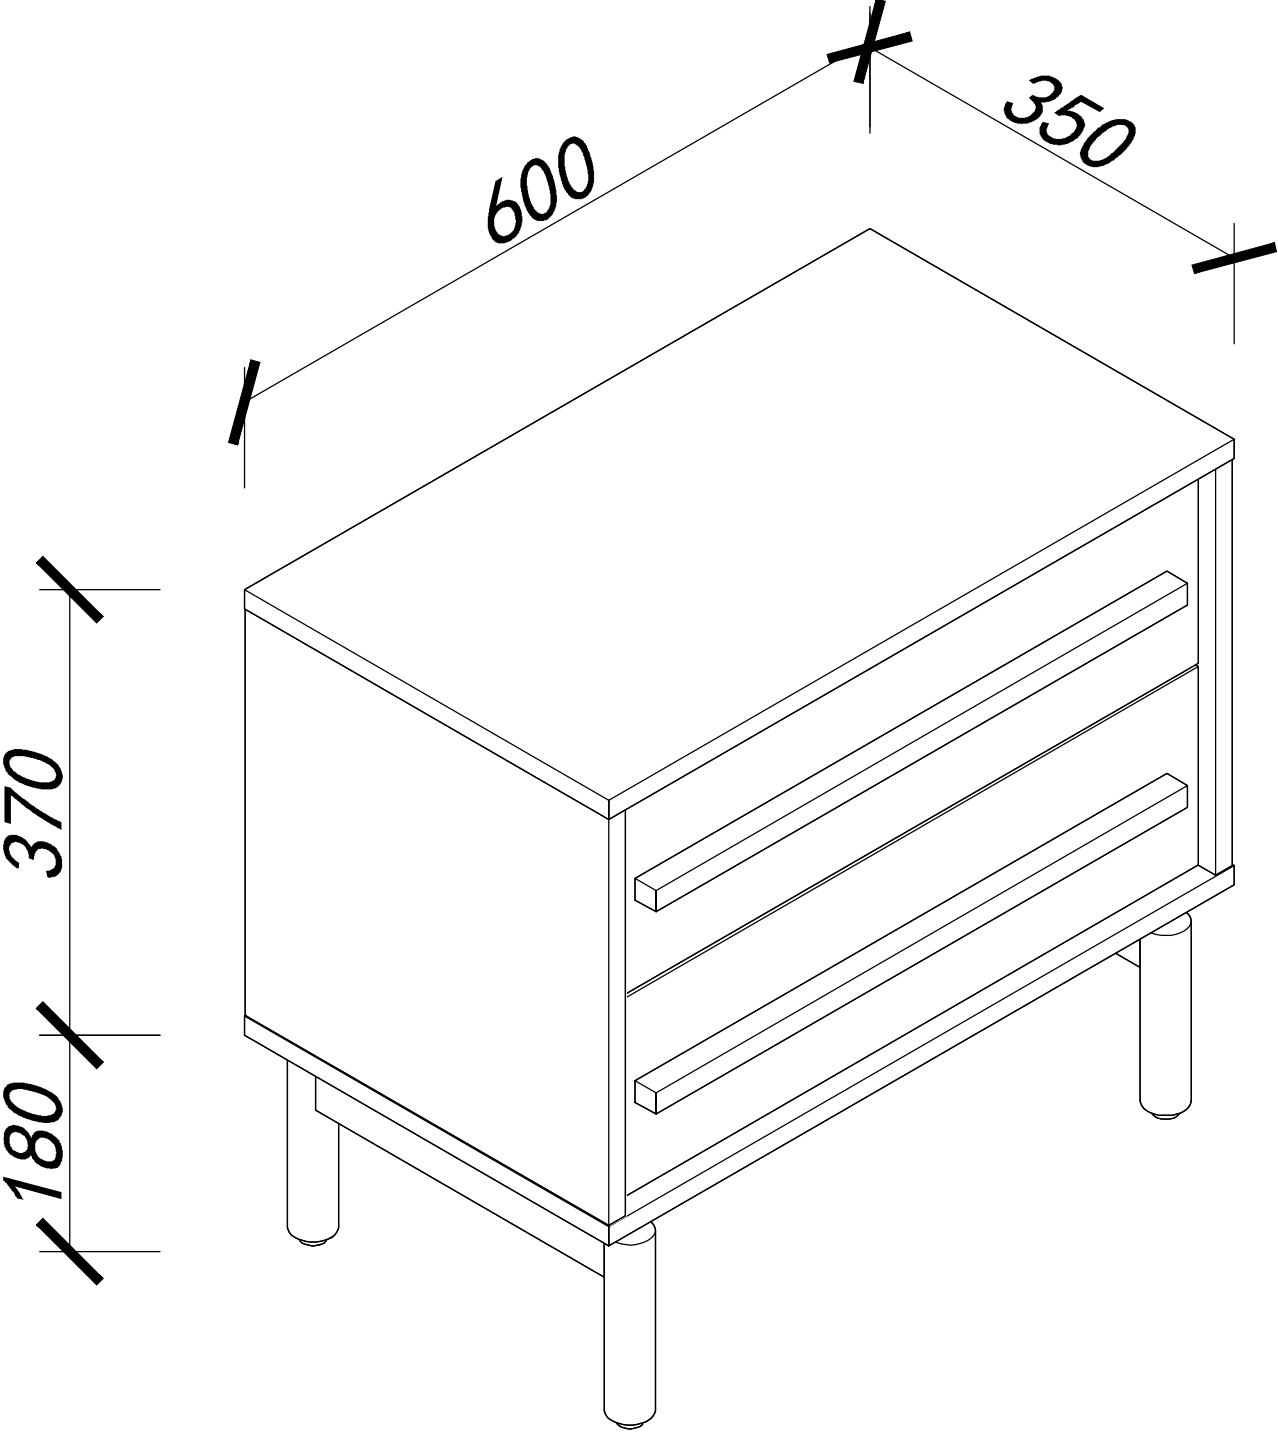
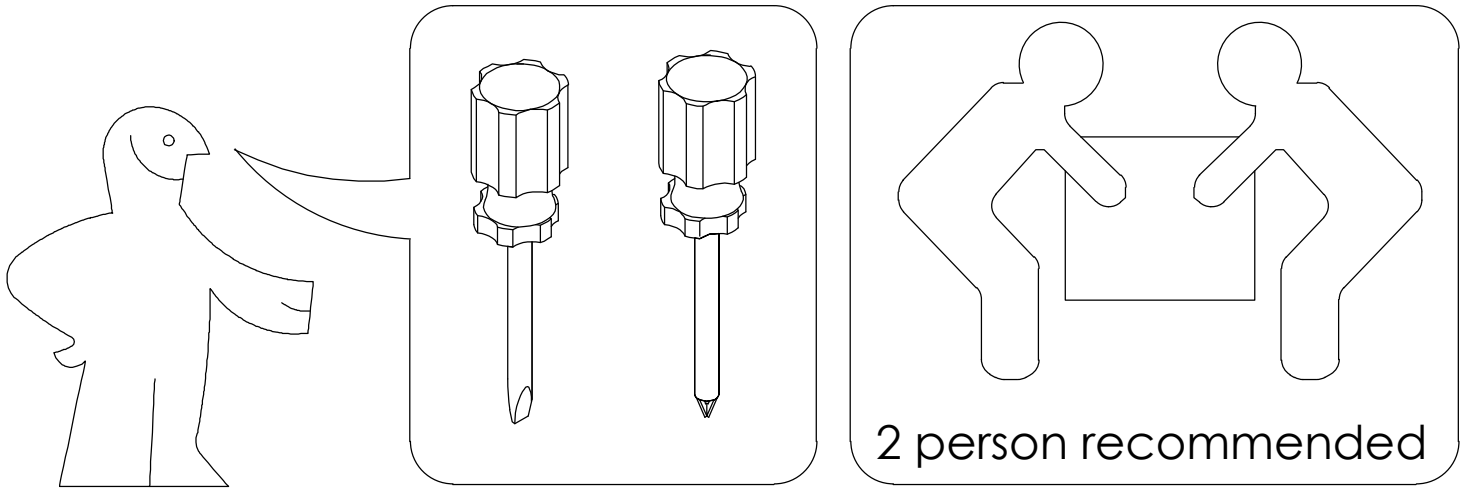
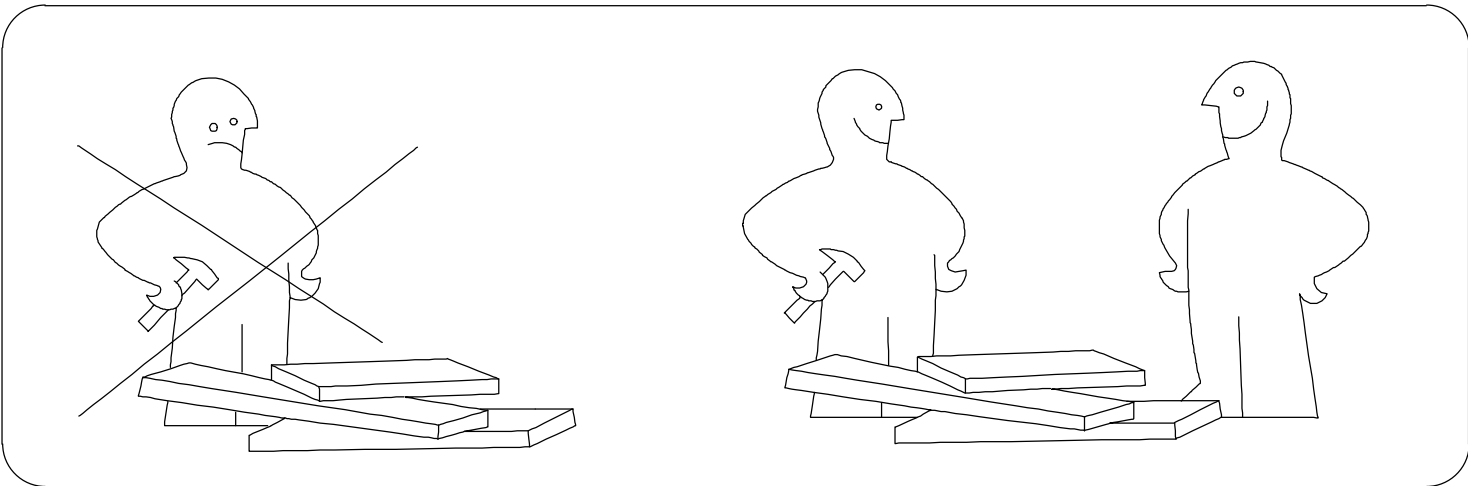


sømcasa


Assembly Instruction

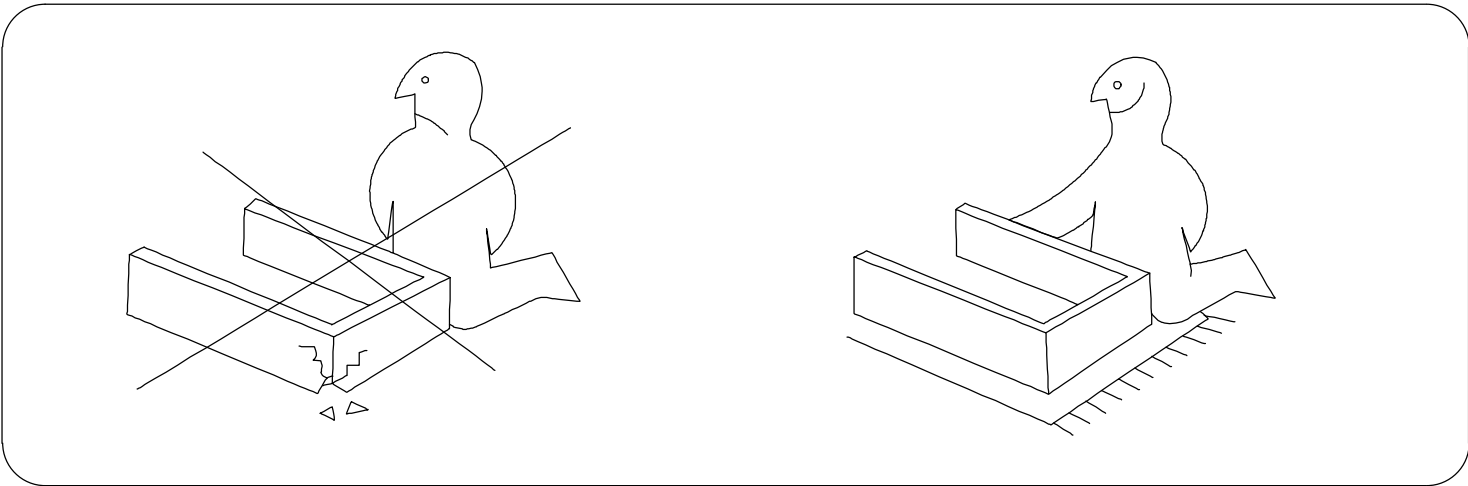

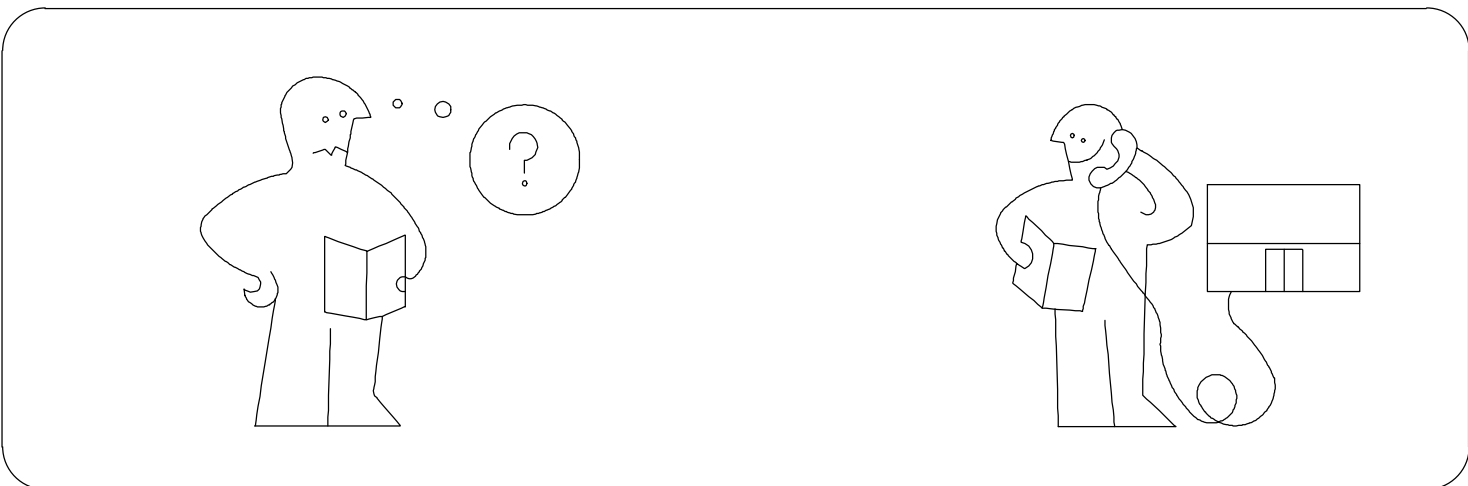

Panel No	Panel Sizes	Quantity
1	600*350*16	1
2	600*350*16	1
3	338*349*16	1
4	338*349*16	1
5	576*348*5	1
6	560*165*16	2

Panel No	Panel Sizes	Quantity
7	522*120*12	2
8	250*120*12	2
9	250*120*12	2
10	532*248*5	2
11	492*60*18	2
12	510*20*18	2

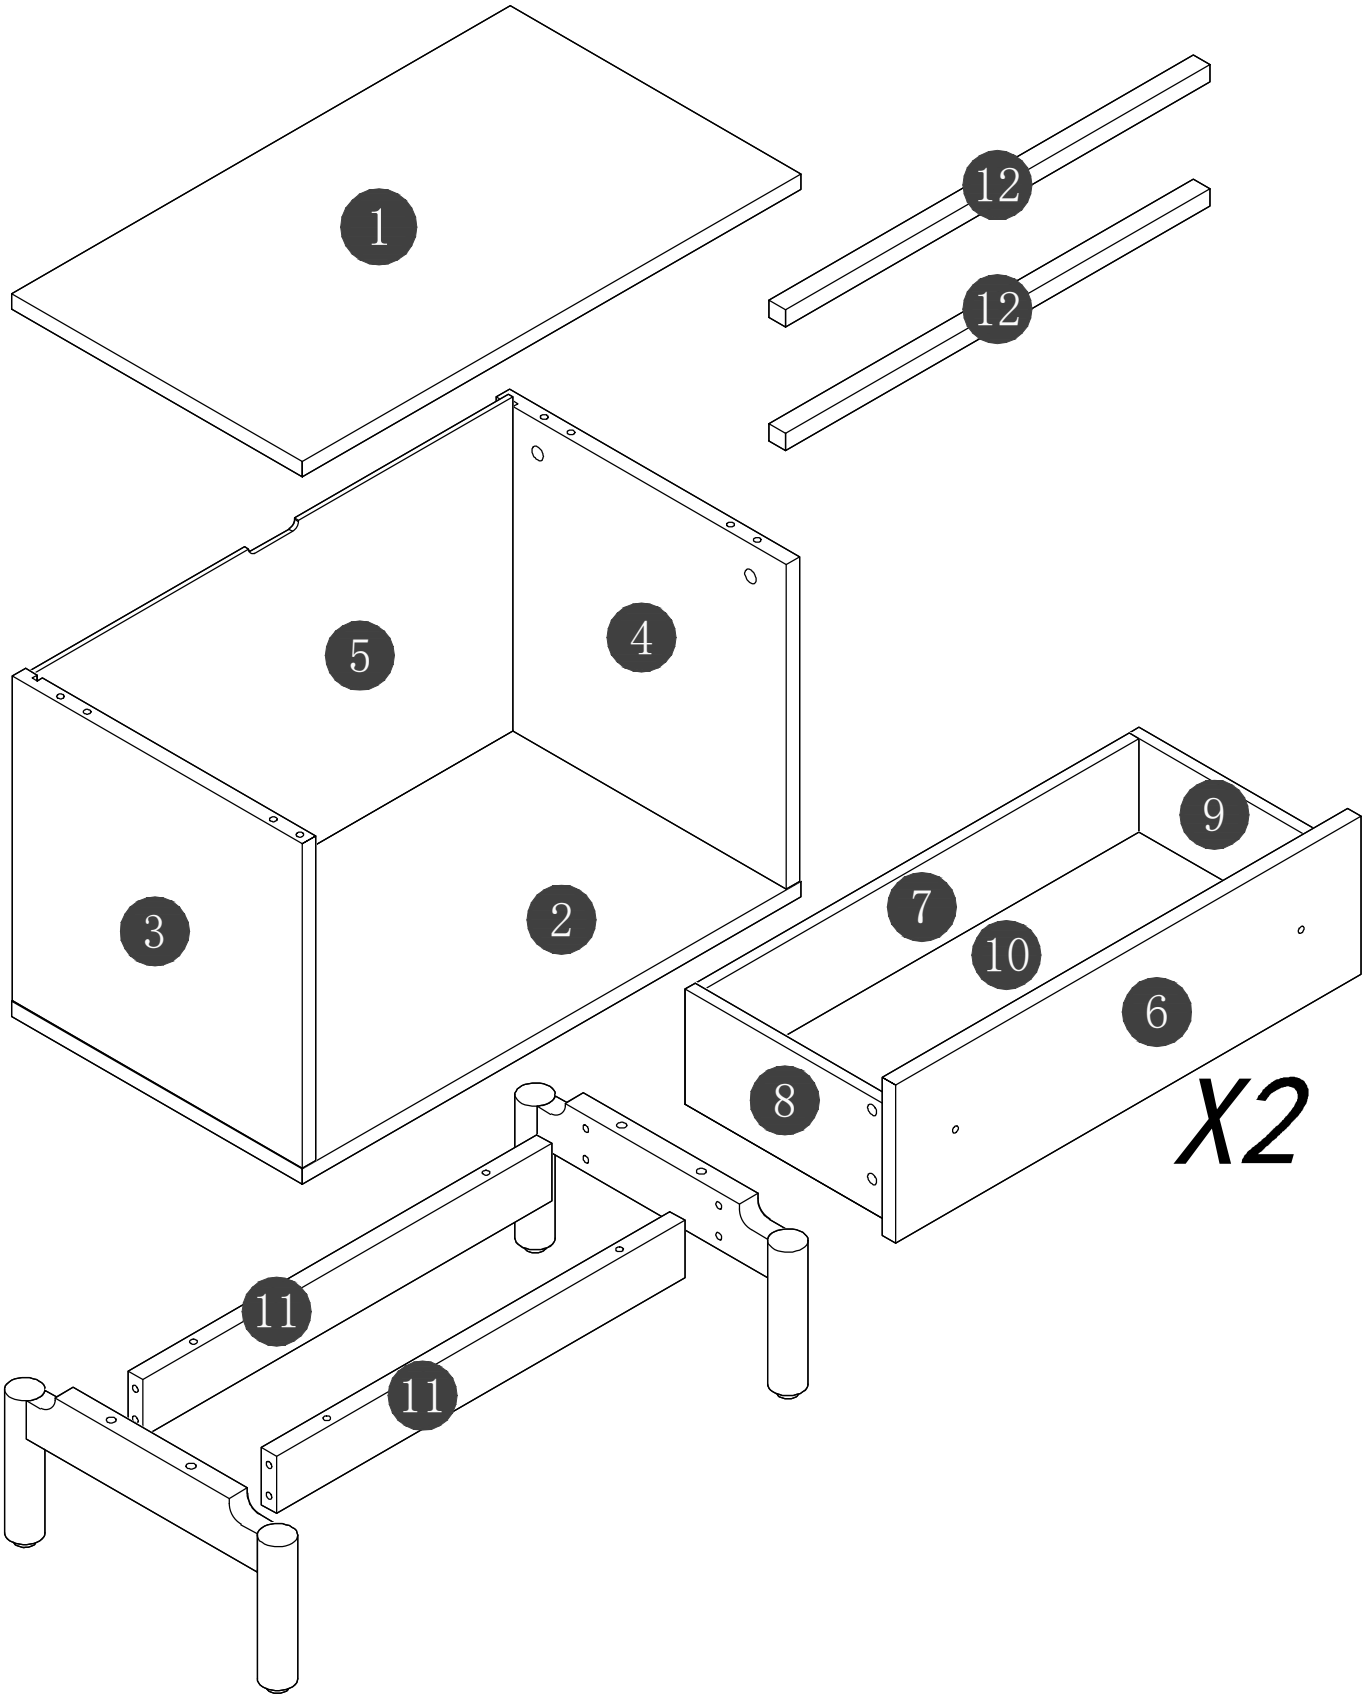

Fittings




M6*40

A=12



Φ 8*30

B=12

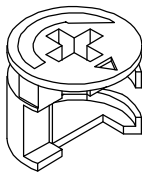


Φ 15*12

C=12




Φ 21


D=28

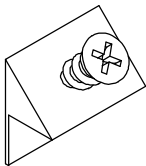

E=4

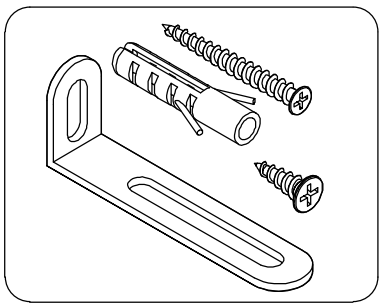

F=1

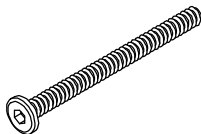


M6*70


G2=4



H=1

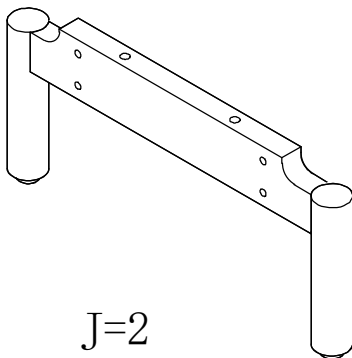

J=2

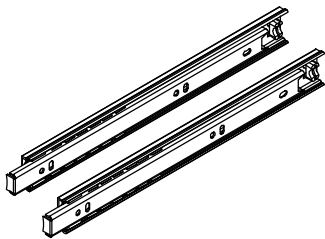


N=2




M6*34

O=16



Φ 12*10.5

P=16

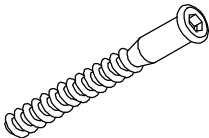


Φ 7*50

Q=4



M3. 5*12

V1=16




M3. 5*30

V3=4




Z1=4




Z2=4


STEP 1

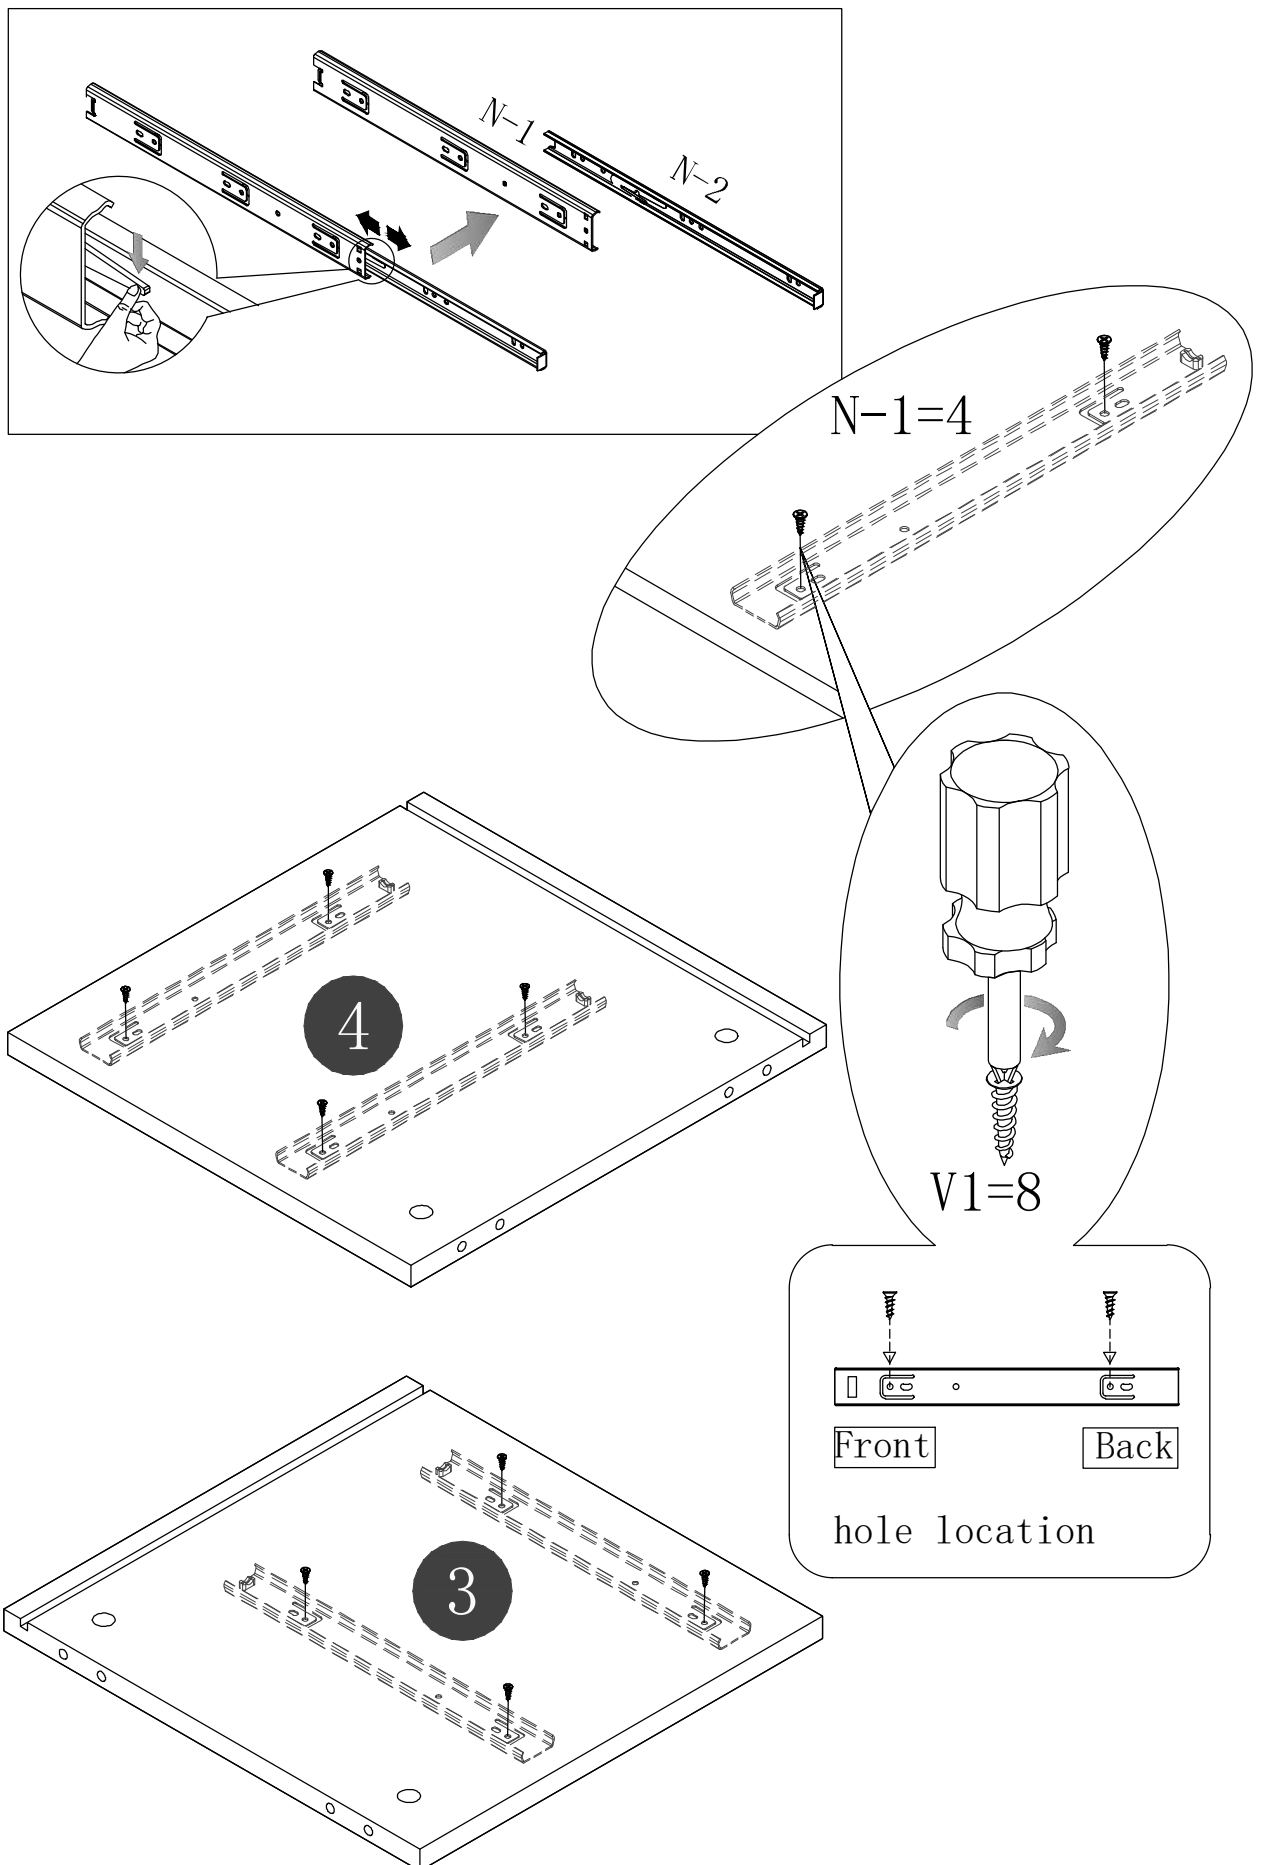


STEP 2

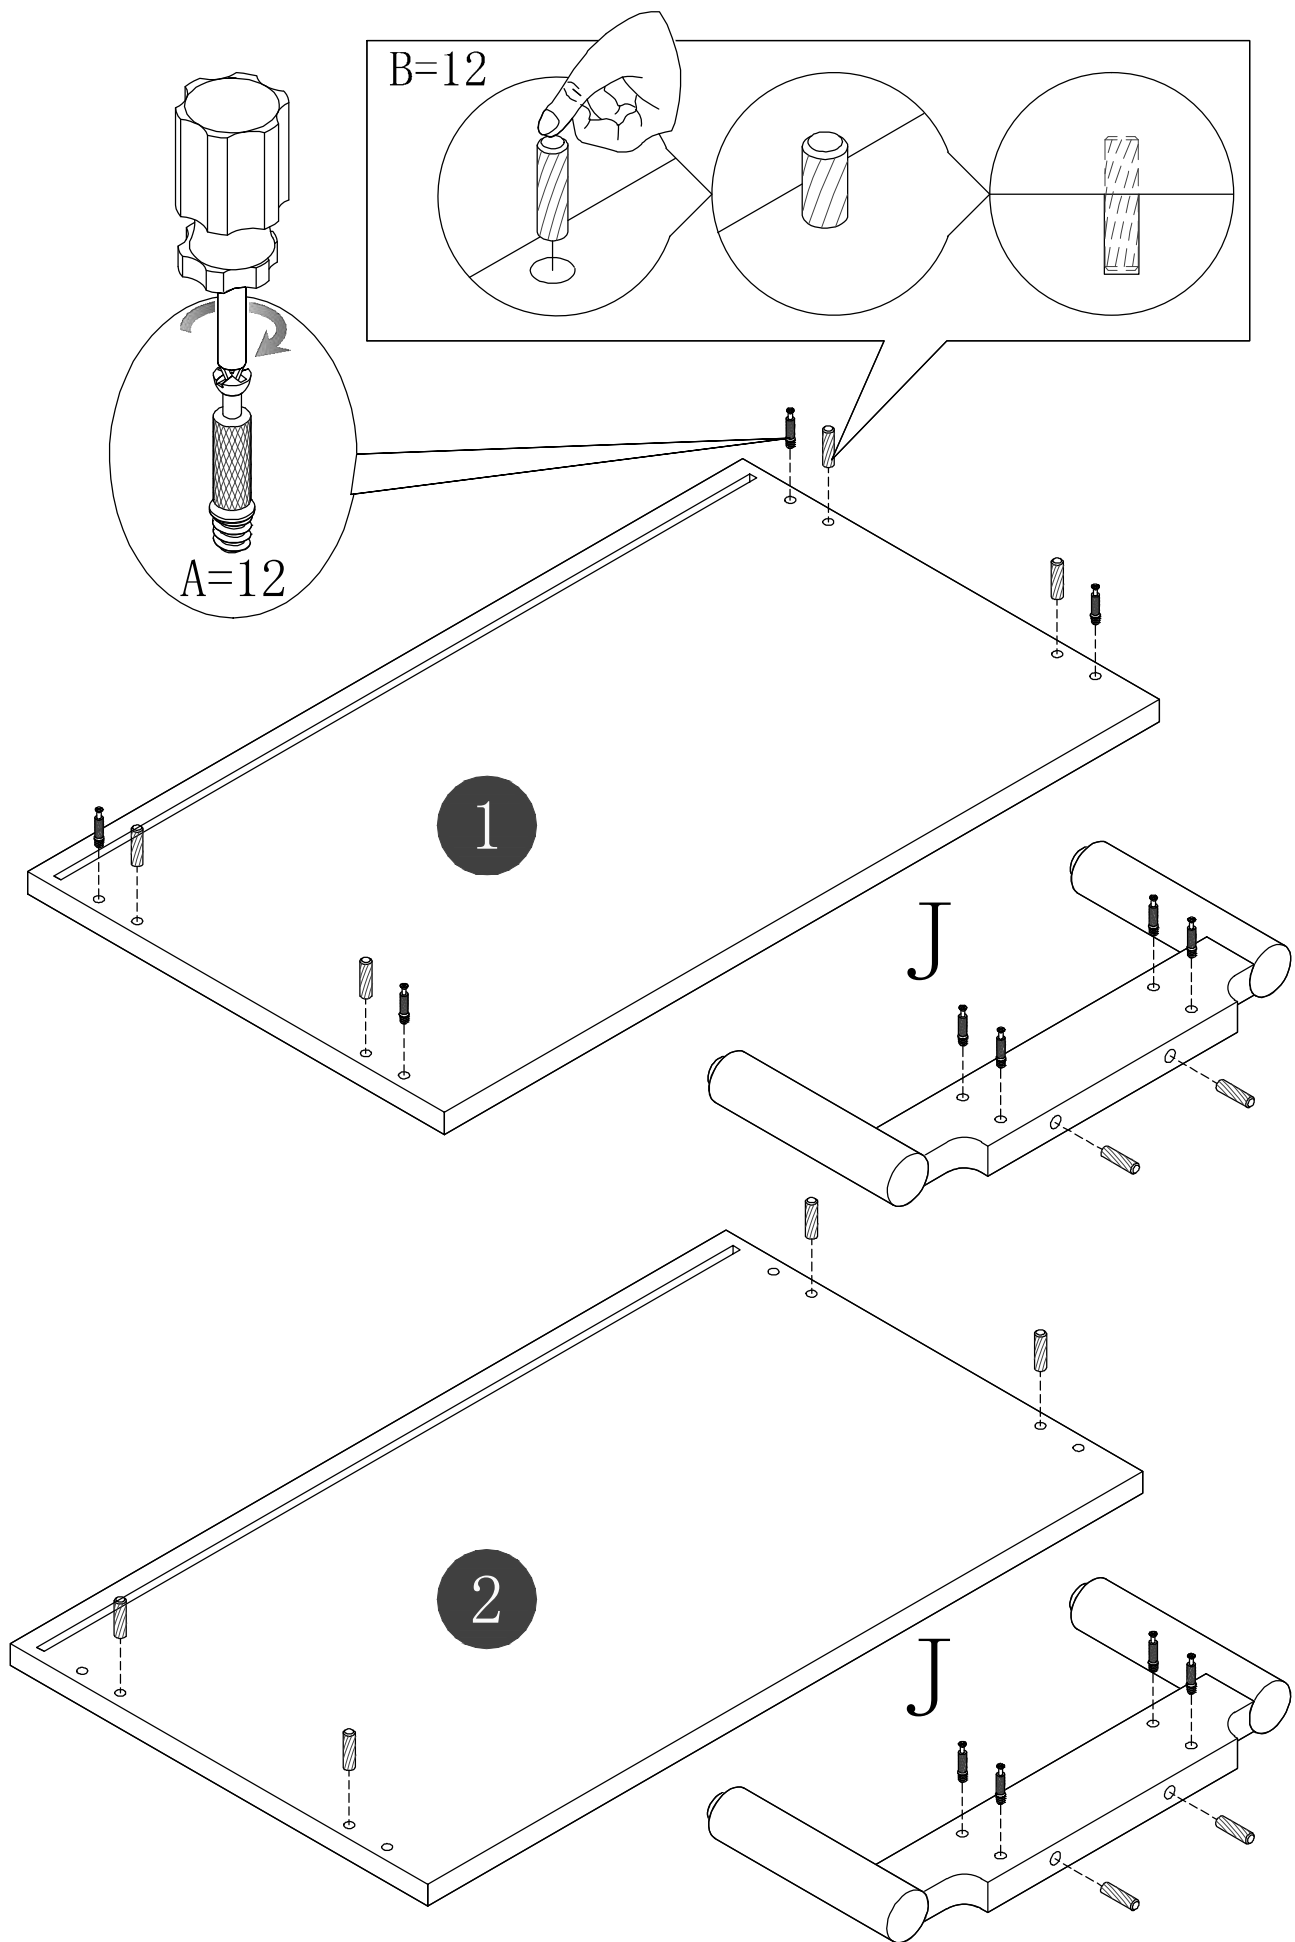


STEP 3

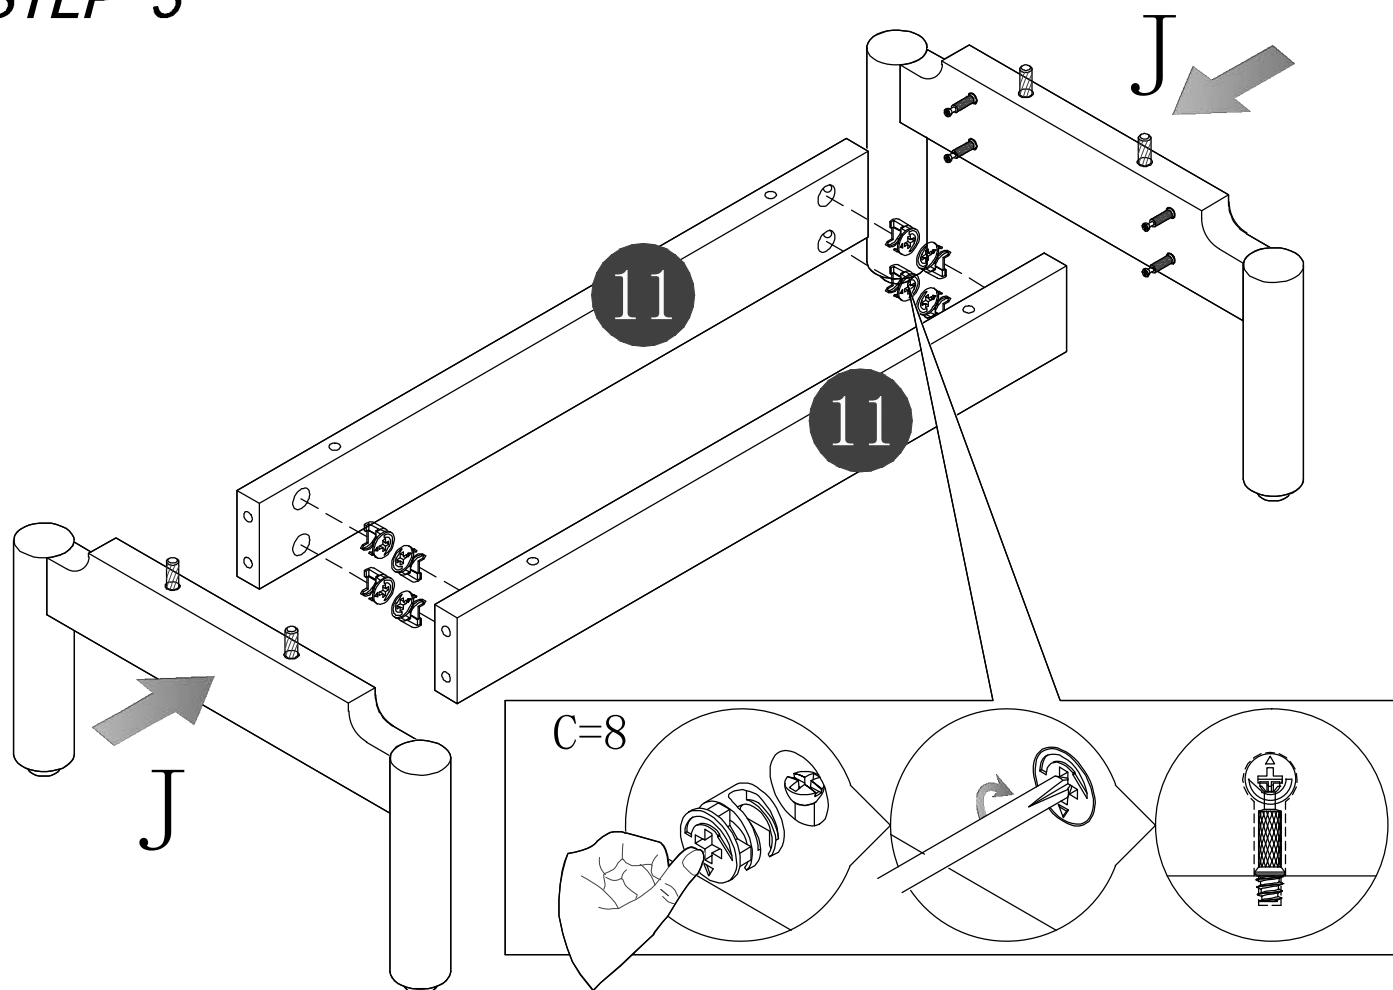


STEP 4

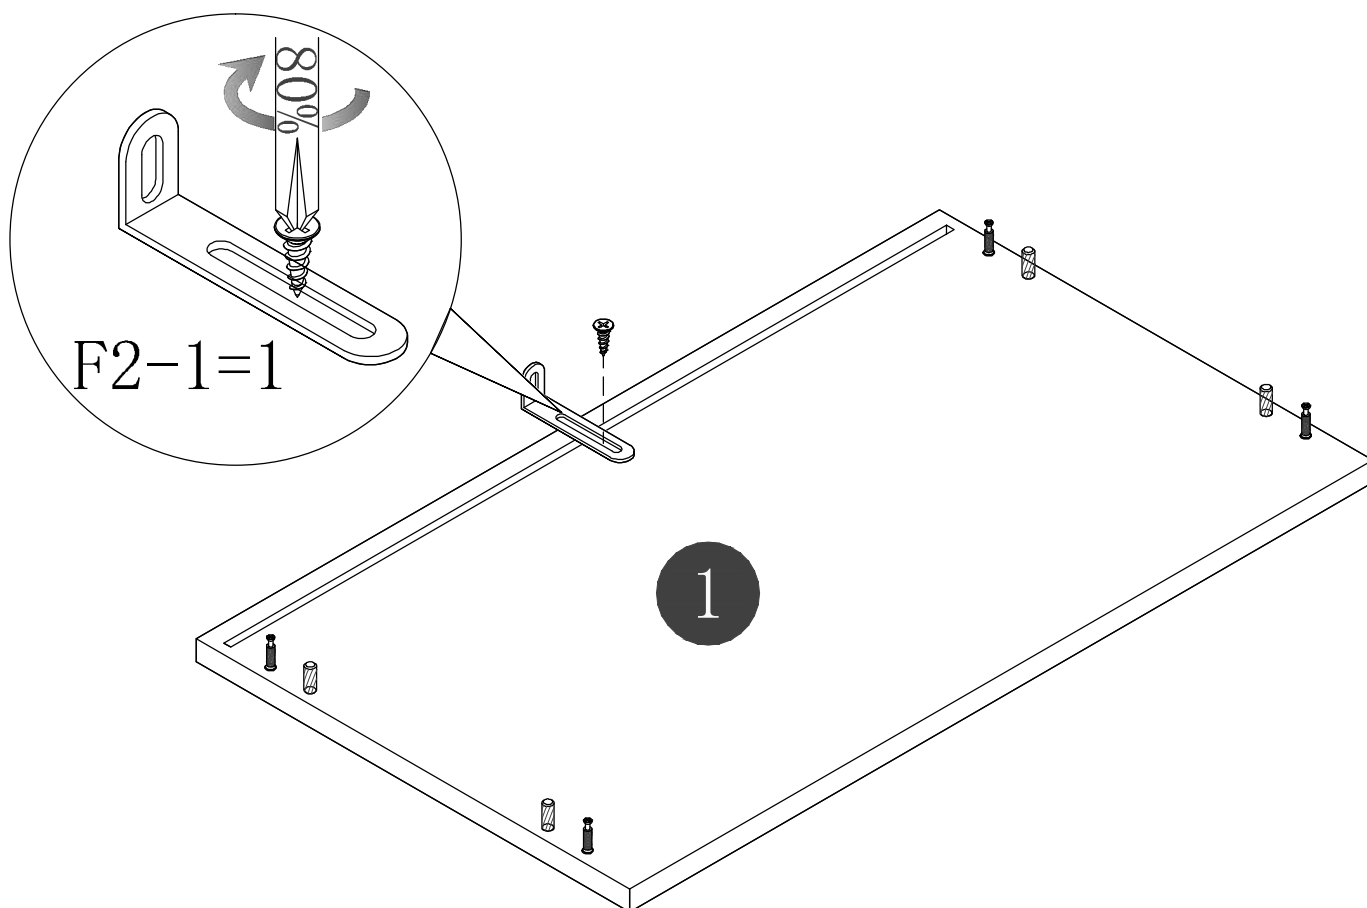


STEP 5

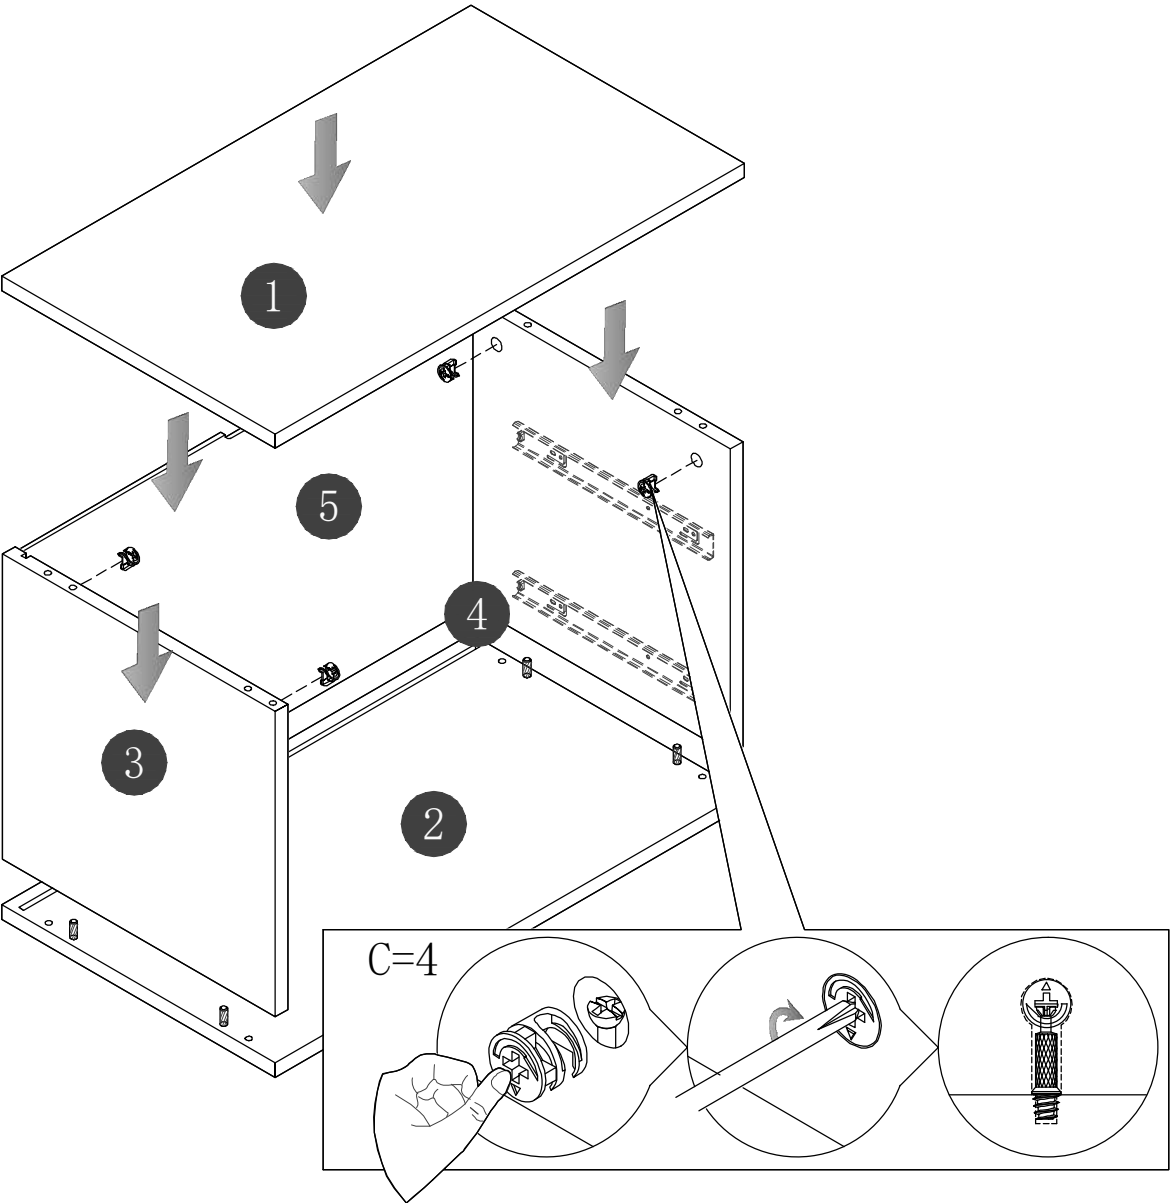


STEP 6

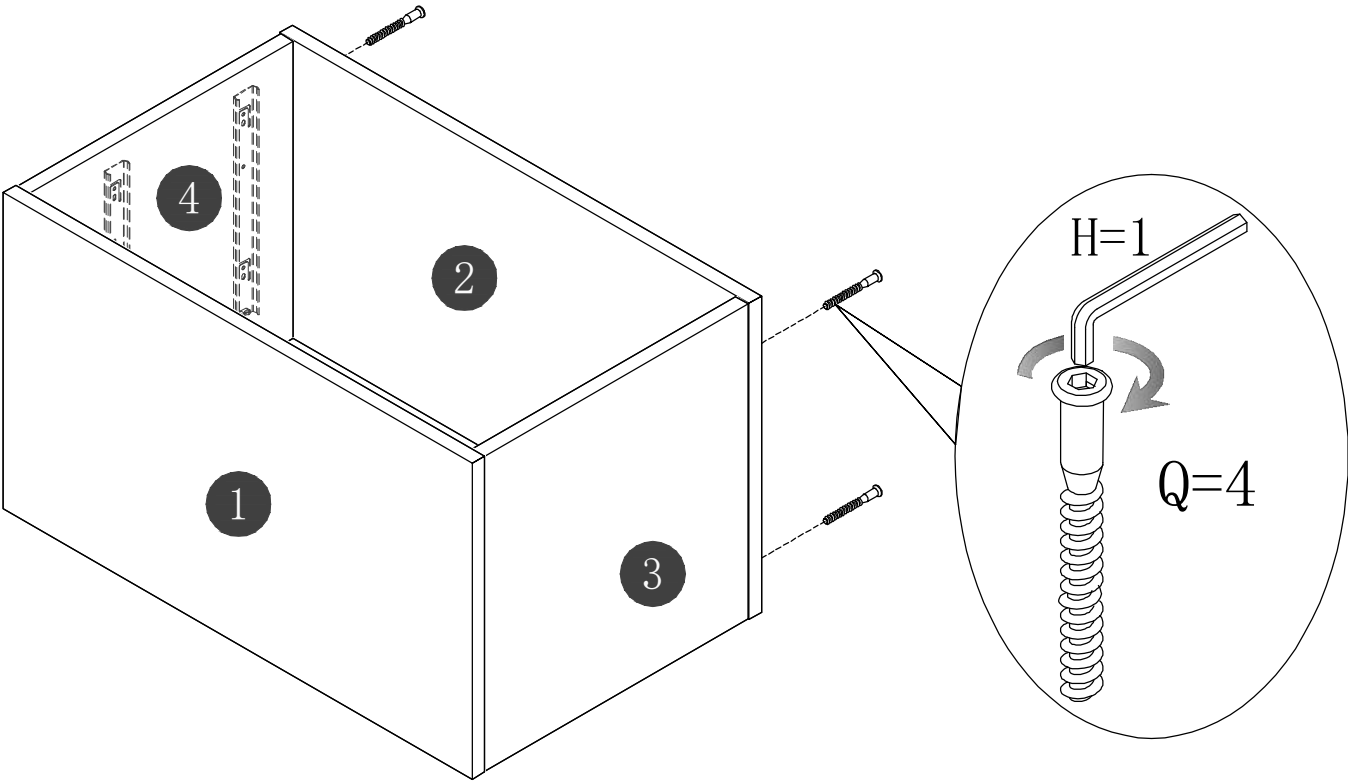


STEP 7

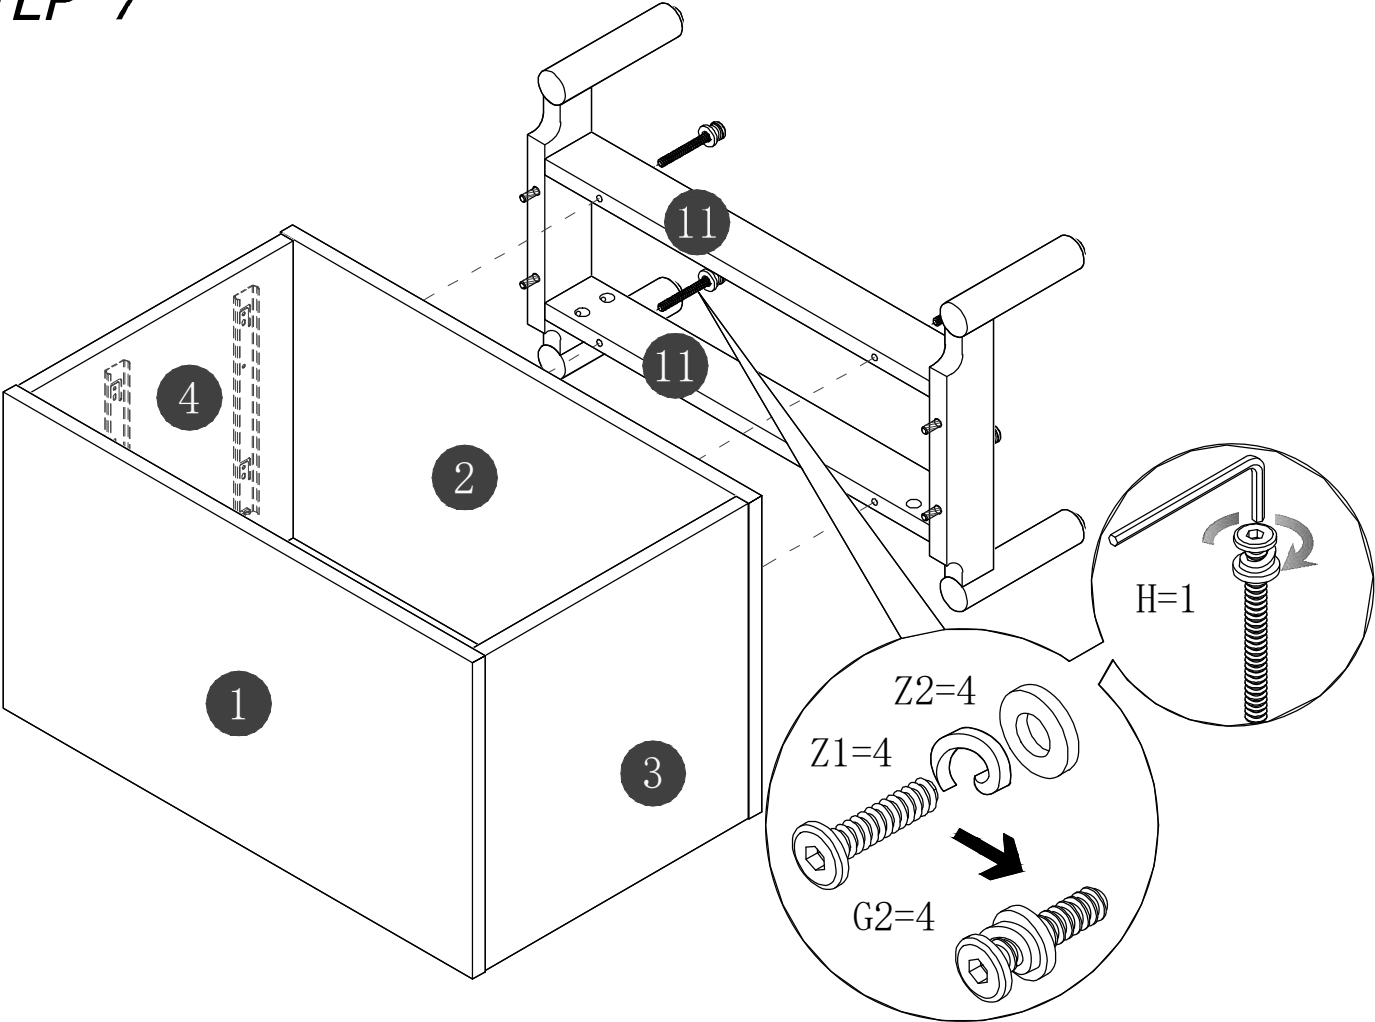


STEP 8

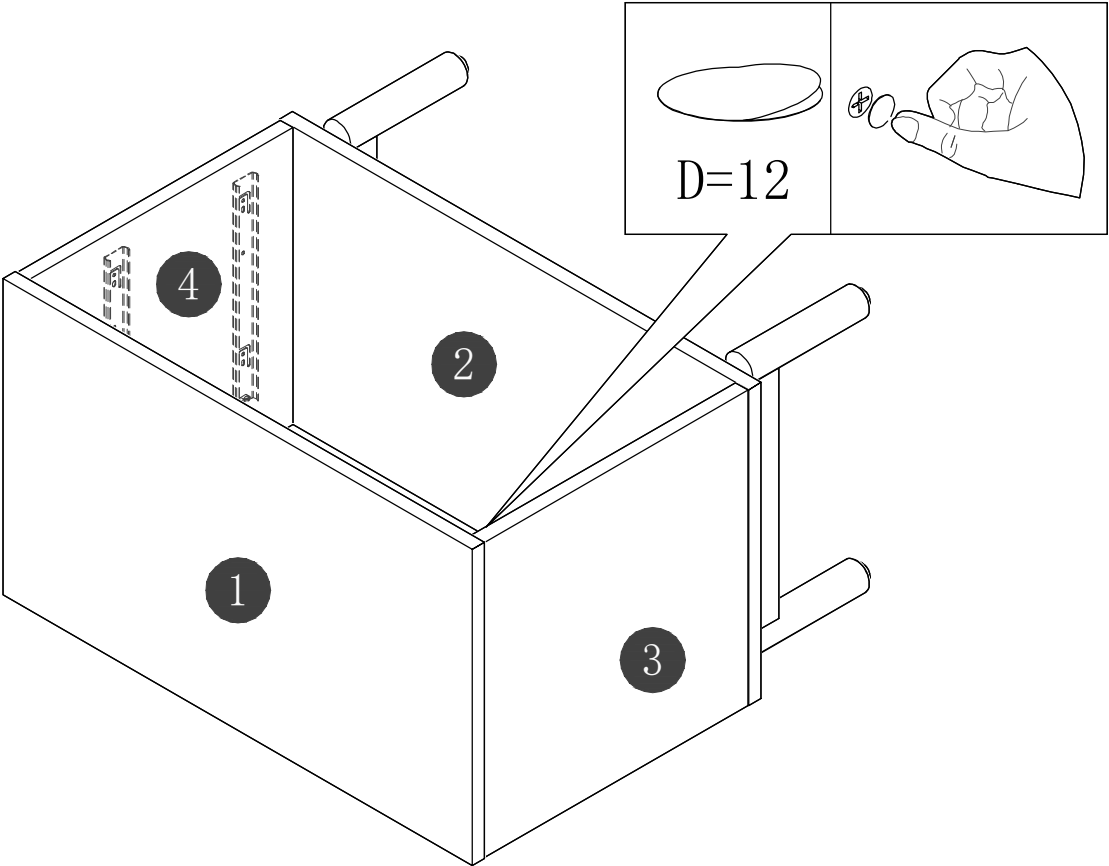

STEP 9

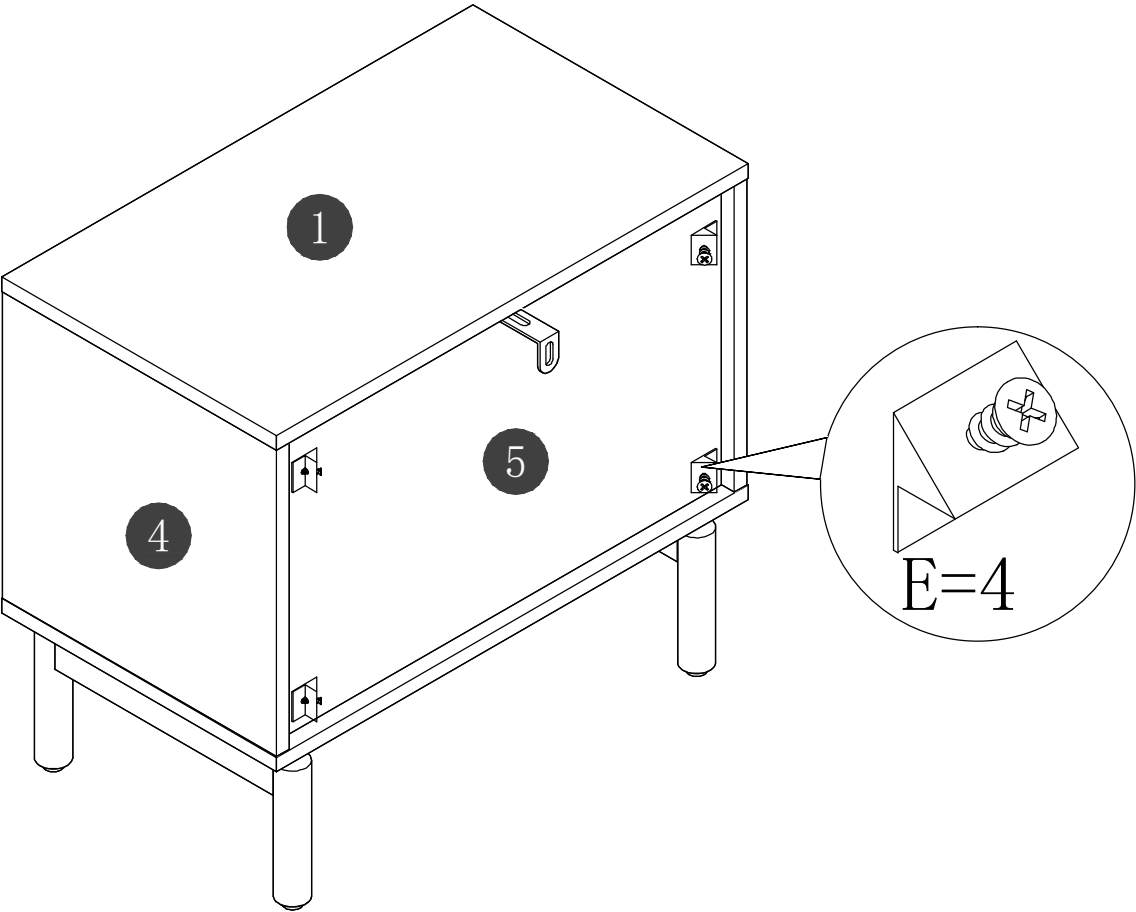


STEP 10

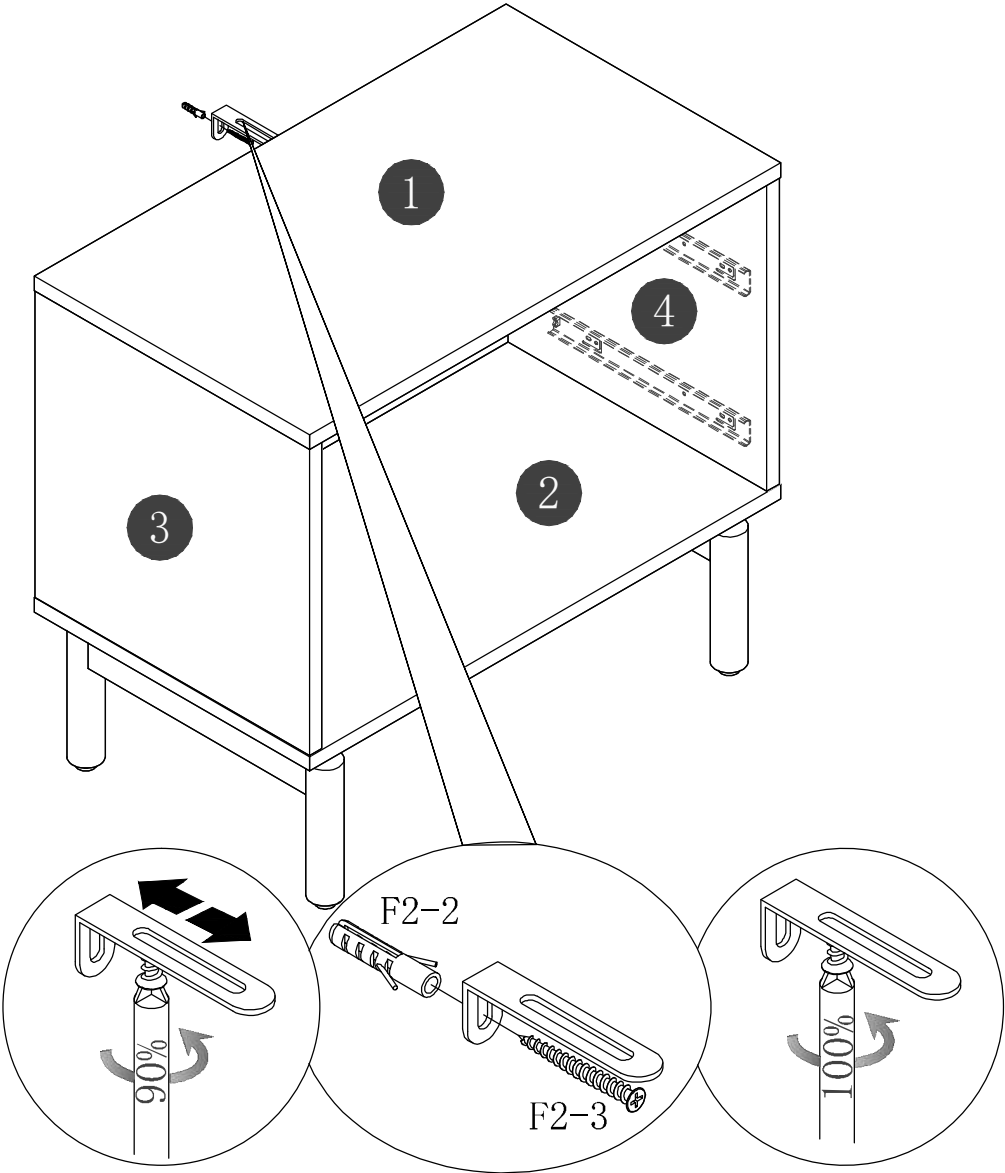


STEP 11


11-1

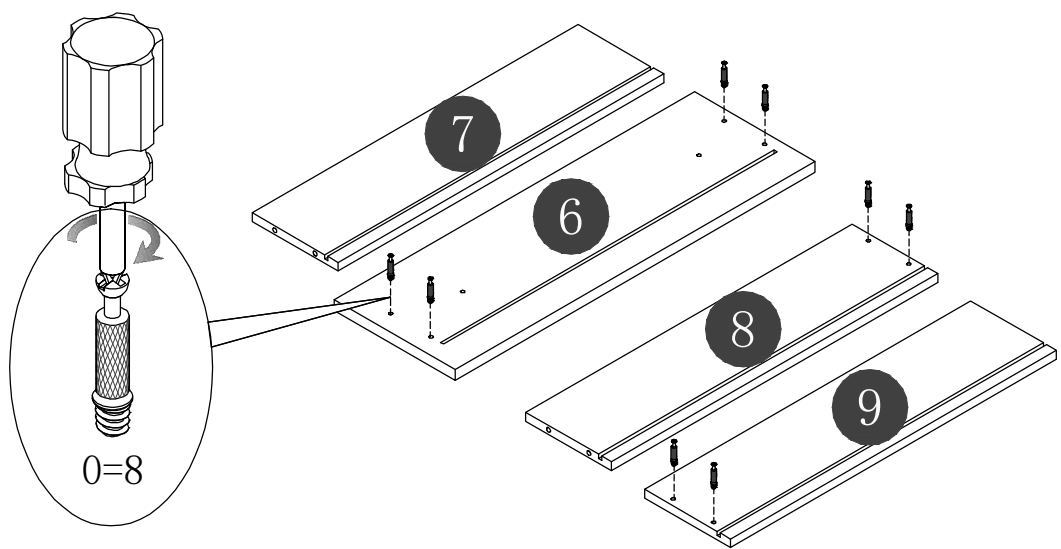


11-2

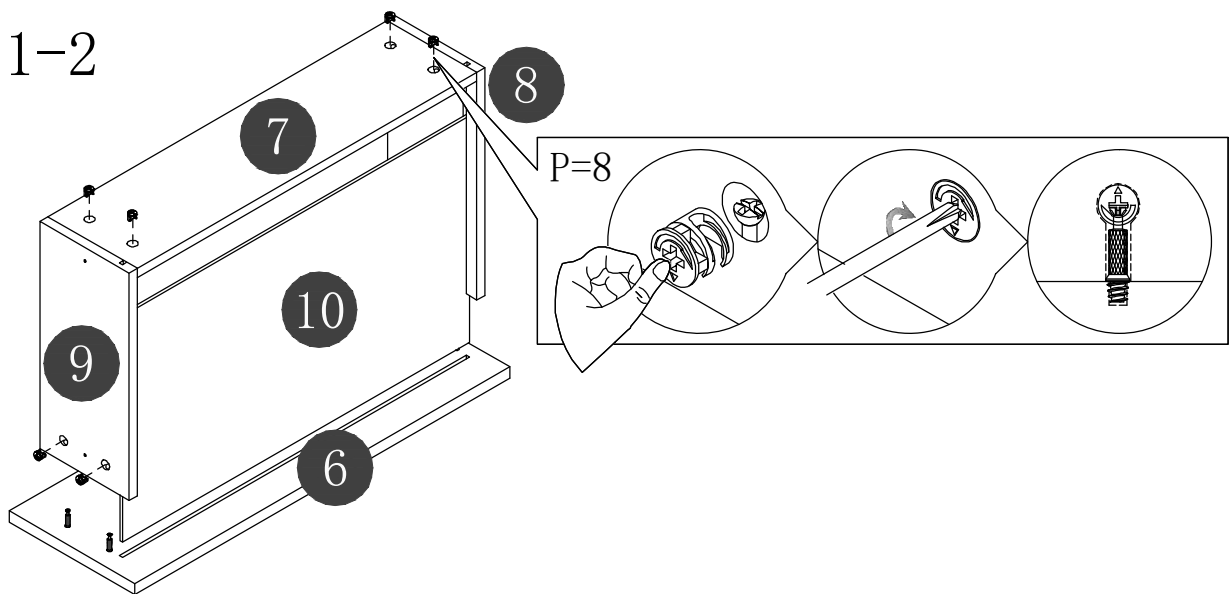


11-3

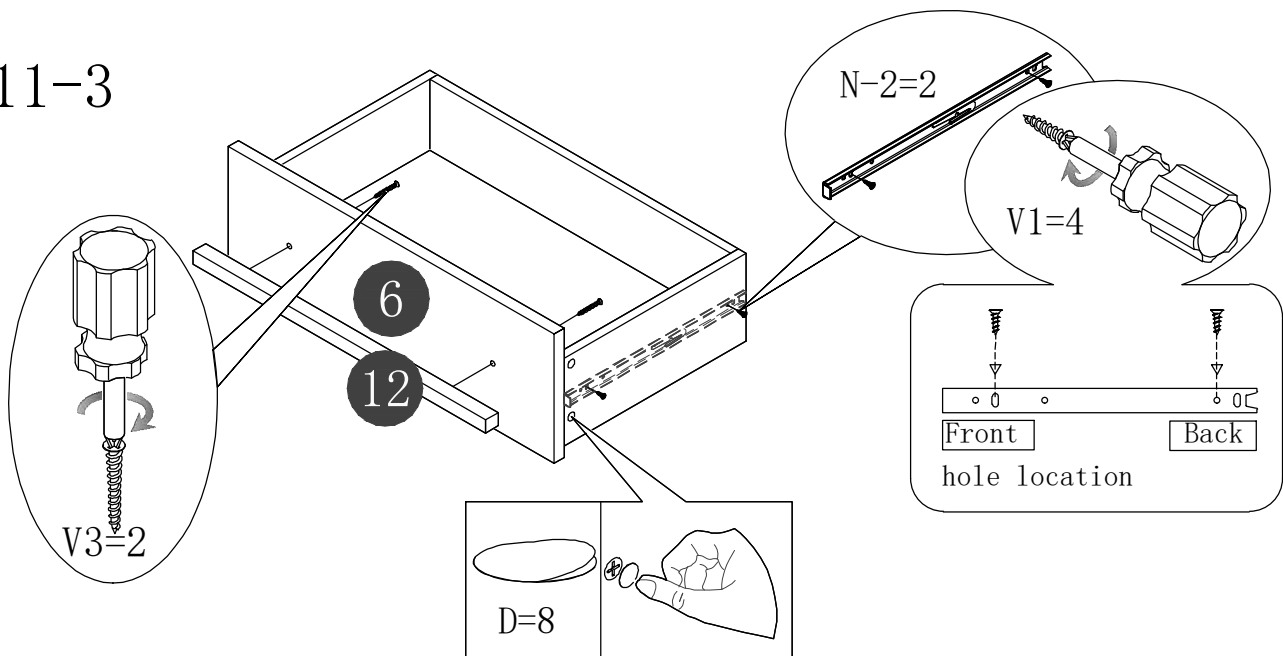

STEP 12

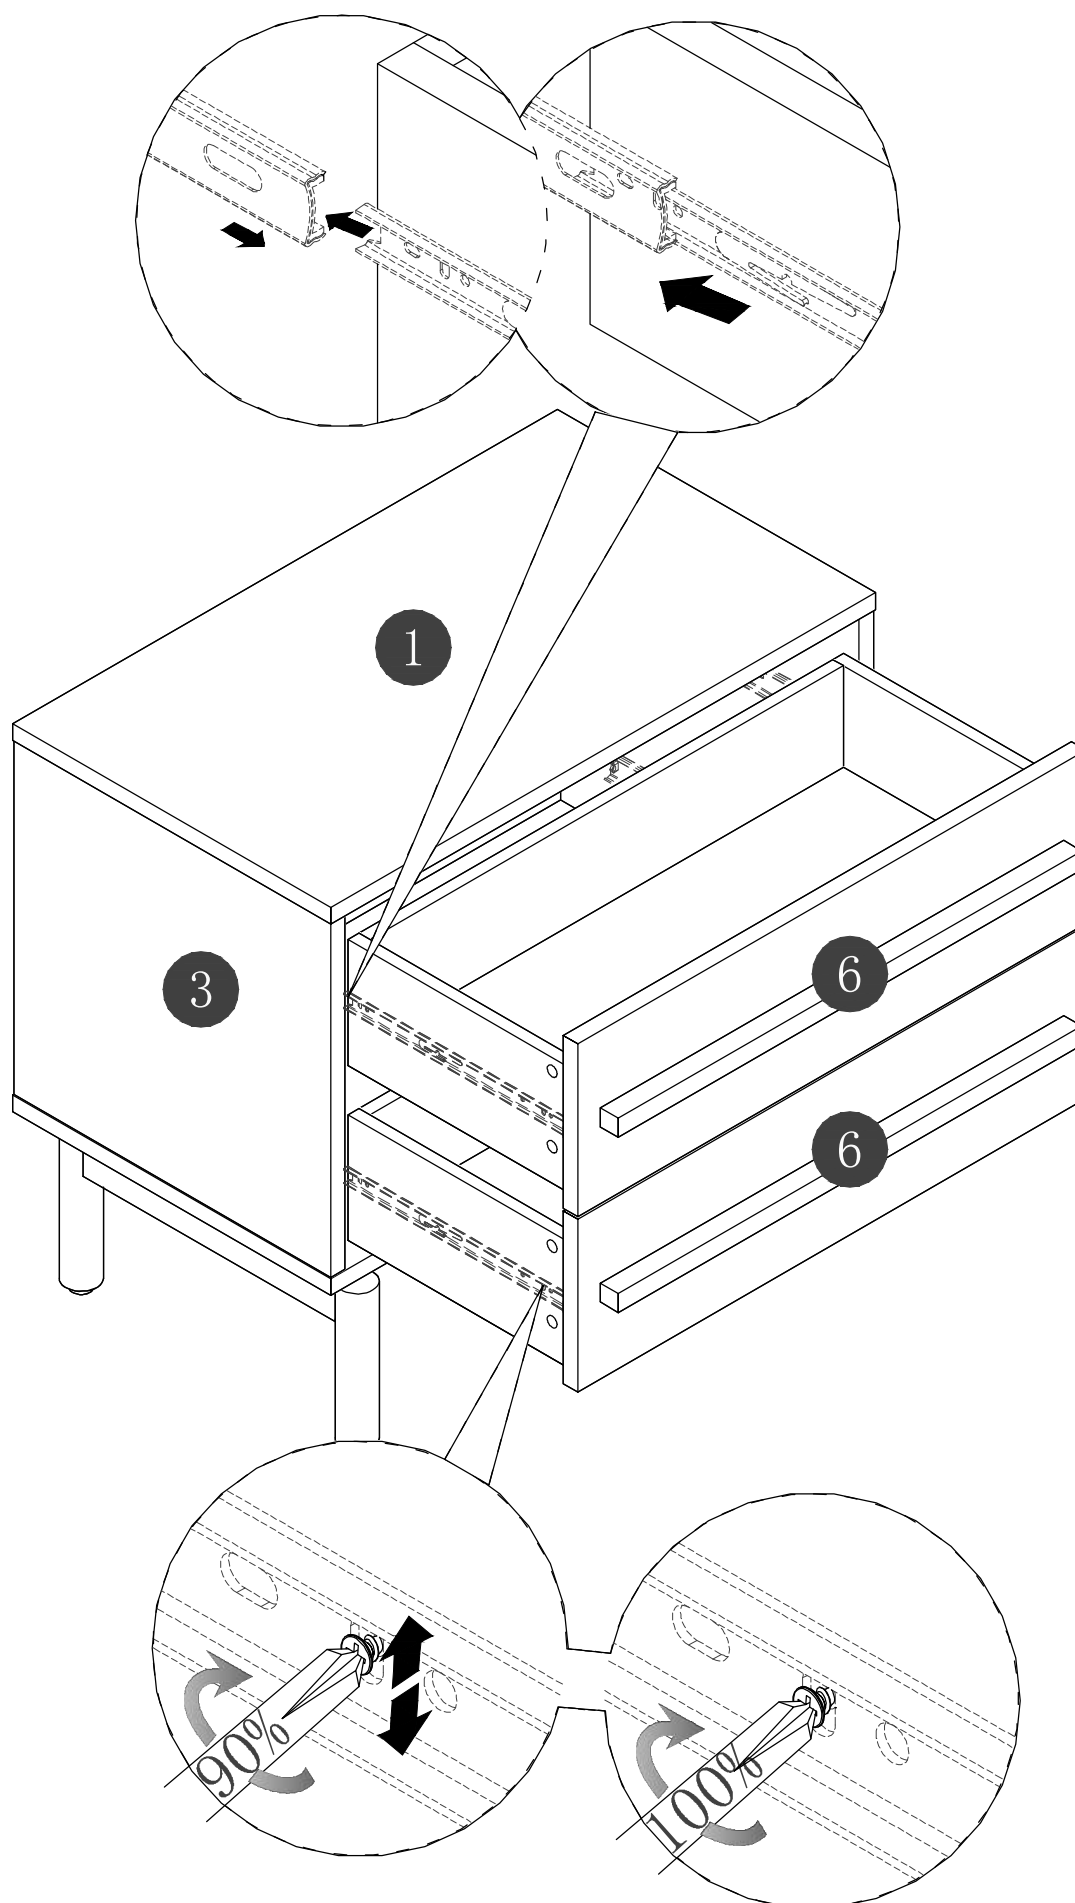

STEP 13

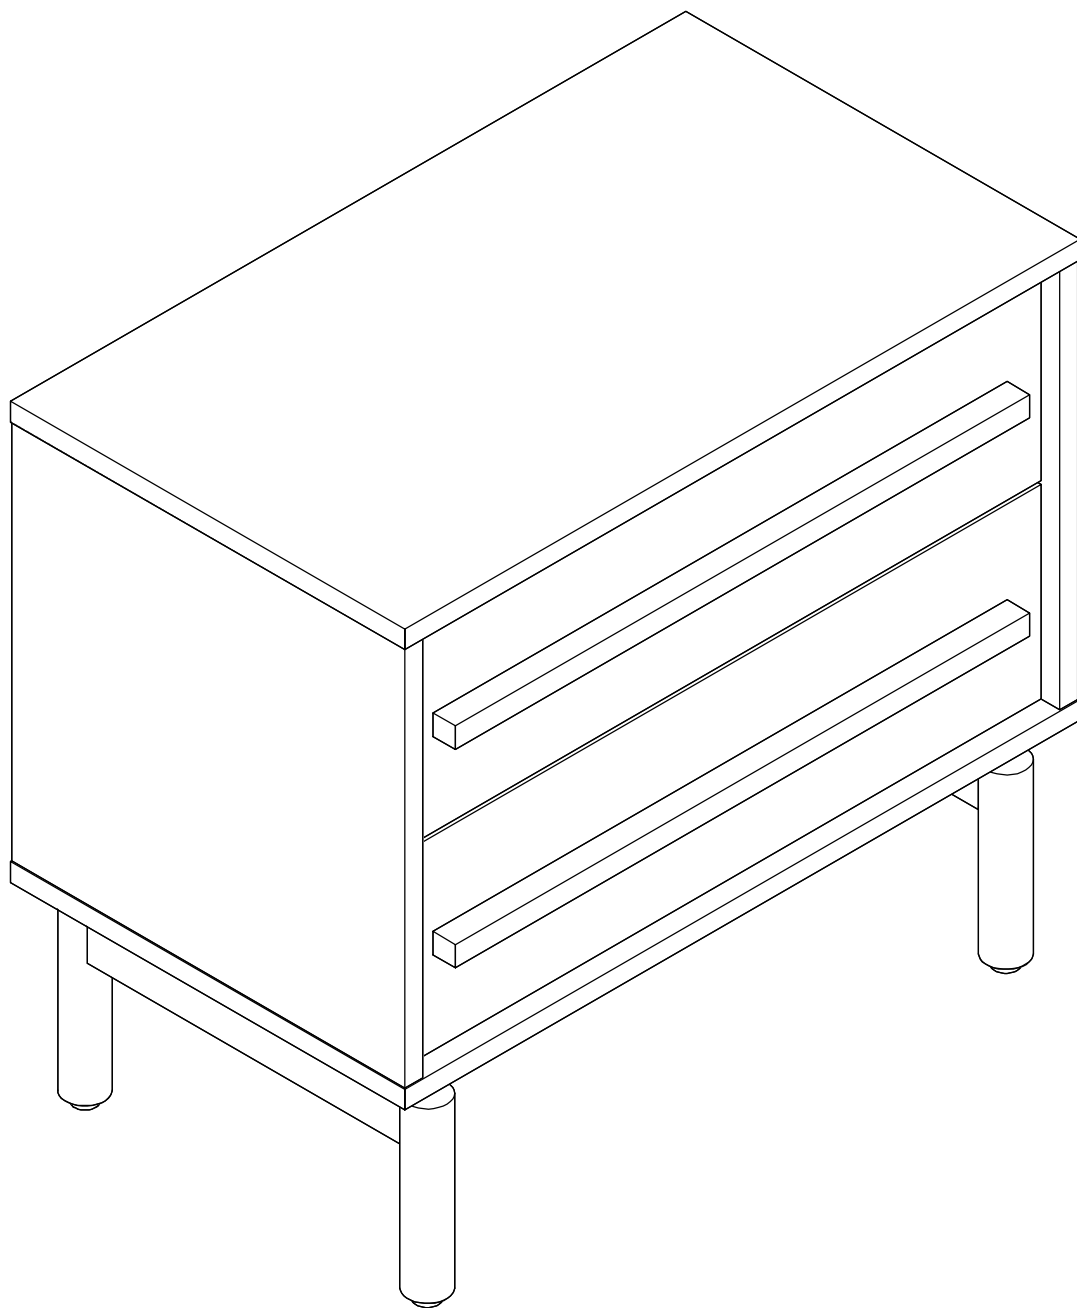

Finish